



ADEMCO GROUP TECHNICAL SUPPORT KNOWLEDGEBASE STEP-BY-STEP PROCEDURE

Created: 5.4.2000
Modified: 5.4.2000
File: 6100-1a.Doc
Pages: 1

Product: **Destiny-6100**
Title: Local Phone Access

LOCAL PHONE ACCESS USING YOUR TELEPHONES AS KEYPADS - The system can be programmed to allow the use of your home telephones as keypads (local phone access is enabled in a defaulted panel). The keypad duplicates the keys on your phone. The * key on the phone is replaced by the A key on the keypad and the # key on the phone is replaced by the H key on the keypad. Default code to access the system is *# (see note 1). The local phone access code must be entered within (5) seconds of picking up the phone. If the correct code is entered within (5) seconds, you will hear the system acknowledgement tone or system status (see note 2). At this point you can control the system from the phone just like from the hardwired keypad.

NOTE 1 - First press * and then press # to access the system. Code can be up to 4 digits. Program values are: 0 = 001, 1 = 001, 2 = 002, 3 = 003, 4 = 004, 5 = 005, 6 = 006, 7 = 007, 8 = 008, 9 = 009, * = 010, # = 011. If you are not using all the digits then the unused digit program locations should be programmed with a value of 255 to disable the digit.

Local Phone Access Code	Location	Value
Digit 1	0784	010 (*)
Digit 2	0785	011 (#)
Digit 3	0786	255 (N/A)
Digit 4	0787	255 (N/A)

NOTE 2 - The program location that determines whether you will hear the acknowledgement tone or system status is location 0134(shown below). The system is defaulted to give an acknowledgement tone after local phone access. To enable system to speak status after local phone access add the value 002 to the default value of 009 shown below. Now the program location 0134 will have a value of 011.

System Options - Group 5

Options - Enter Total	Location	Value
Speak auxiliary zone type		001
Speak status immediately after local phone access		002
Silence inside speaker in HOME/Night mode (Not evaluated for UL installation)		004
(Not Available When Split Arming is Enabled)		
Speak zone description in Extended Monitor		008
Disable force arming (For UL installations this option must be enabled)		064
Default	0134	009

NOTE 3 - If your regular phone line is out for any reason you will not hear a dial tone when you pick up a phone. However, you will hear a series of tones indicating the phone line is gone. If this is the case, there is no need to access the system because the phone will already be a system keypad when it is picked up. Press any key and the tones will stop. If your system communicates to a central station and there is an activation, you can pick up a phone and simply enter your disarm code. The system will recognize the phone as a keypad as soon as you pick it up.

NOTE 4 - When you access the system from your home phone, your normal incoming phone line is disconnected. In the case of an incoming call you will hear one-second tones similar to call waiting. To answer the call simply hang up to terminate telephone keypad access.

RELATED TOPICS

Lights and Appliance Control
Two Way Voice Listen-In
User Code + Digit Functions
Local Phone Panic Activation
Arming System
Disarming System